

Lukasa

SN004

BT/CD/MP3/USB PLAYBACK

User Manual

Please read this operation manual carefully before using this unit.

Foreword

To users

Welcome to join us and we greatly appreciate your selection of **Lukasa** products.

In order to make full use of your player, please read this manual before use so that you can well know the connection method and key points of operation of this system. You will find that we have made a lot of explorations in the design, manufacturing process, humanized operation and so on in order to meet the requirements of our users.

Please keep this manual in a safe place for future reference.

Open the package

Please carefully open the package, confirm the following accessories and place them in a safe place to prevent missing.



- | | |
|---|-----|
| <input type="checkbox"/> Operation Manual/Warranty Card | 1PC |
| <input type="checkbox"/> Charger cable | 1PC |
| <input type="checkbox"/> Earphone | 1PC |
| <input type="checkbox"/> Aux Cable | 1PC |
| <input type="checkbox"/> Flannelette Bag | 1PC |

If the design of this unit is modified and become inconsistent with the specifications in this manual, please operate subject to the actual product, and any modification may not be notified.

Table of Contents

Precautions	3-4
Main Technical Indicators.....	5
Names of Parts.....	6
Functions of Buttons on the Unit.....	7
Description for Functions.....	8
Disc Operation.....	9
USB Disk Operation.....	10
Maintenance.....	11



Warning:

To avoid fire or electric shock, do not expose the unit to rain or moisture.



Attention:

The laser beam emitted by laser head may cause some harm if it directly irradiates the human body. You must operate this unit according to this operation manual. Do not open the case of this unit or repair by yourself to avoid exposure yourself to the laser beam.

Precautions

Please read this operation manual carefully before using this unit, and please keep this manual in a safe place for future reference. All warnings and precautions in this manual and on the unit as well as the following safety rules must be strictly observed.

Working environment

1. **Water and moisture.** Do not use this unit near water, such as near bath tub, washing basin, kitchen sink, laundry tub, wet floor, swimming pool or similar places.
2. **High heat.** Do not use this unit near heat sources, including heating pipe, heater or other appliances that generate heat.
3. **Surface to be placed.** Place this unit on a flat surface.
4. **Ventilation.** Place this unit in a space with adequate ventilation around. Space more than 10cm shall be left above and behind this unit and on the two sides of the unit, there shall be spaces more than 5cm left.
 - Don't place the unit on a bed, blanket or similar surface that may obstruct the vents.
 - Don't Place the unit in a bookshelf, cabinet or enclosed shelf which may affect the ventilation of the unit.
5. Do not allow objects or liquids to enter the body of the unit from the vents.
6. **Condensation.** Moisture may condense at the laser lens under the following conditions:
 - This unit is moved from a cold place to a warm place.
 - The heating system has just opened.
 - This unit is used in a very humid room.

This unit can't work properly when condensation occurs inside the unit. If this happens, you shall stop using it for a few hours before further operation.

7. **It is forbidden to place a liquid-filled article, such as a flower vase and so on, on the unit.**

Precautions

If the power plug of the adapter is used as a disconnecting device, the power supply shall be properly located for easy operation.

When charging is completed or it is not charging, please disconnect the charger from the unit and unplug the charger.

Do not drop or bump the charger. If the charger case is damaged, replace the adapter immediately.

If the power wire of the charger plug is damaged, do not continue to use it to avoid electric shock or fire.

In order to improve the service life of the data cable, do not pull the data cable with hand after charging or connecting with computer.

Do not touch the unit or charger with wet hands to avoid short circuit, malfunction or electric shock.

If the unit or charger is exposed to rain, liquid or severe moisture, stop using it immediately.

Please charge the unit with a charger that complies with the national safety regulations.

Never use organic solvent, acid/alkali or other chemical liquids to clean the unit to prevent damage to the case of the unit.

Don't use or store the unit under high temperature, high pressure, humidity, strong static and in strong magnetic field so as not to cause internal circuit failure of the unit.

Please use this unit under 0°C ~ 35°C and store it and the related accessories under -20°C ~ 50°C.

Main Technique Specification

Power supply: Rechargeable polymer battery 3.7V

Output power: 1W (Watts)

CD playback frequency range: 31.5Hz-16kHz±3dB

CD signal to noise ratio: ≥50dB

CD sampling frequency: 44.1 kHz

Digital-analog conversion method: 16 bits

Speaker impedance: 4 (ohms)

Unit Size: 145mm X 25mm

Weight: about 340g

Please feel free to contact me if you need any further information.

SHENZHEN SBIRD TECHNOLOGY CO., LTD

ADD: 2F, Building B, Bantian high-tech Industrial Park, Longgang District, Shenzhen

E-mail: sbirdservice@hotmail.com

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

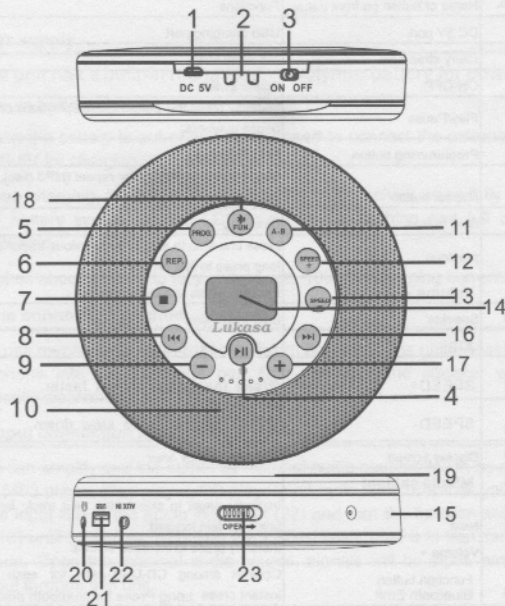 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

RF Exposure

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Names of Parts



- 1.External DC charging port 5V
- 2.Carry strap hole
- 3.On/off button
- 4.Play/pause button
- 5.Programming button
- 6.Repeat button
- 7.Stop button
- 8.Previous/fast rewind button
- 9.Volume -
- 10.Built-in speaker
- 11.A-B repeat
- 12.Speed+

- 13.Speed-
- 14.Display screen
- 15.Middle cabinet
- 16.Next /fast forward button
- 17.Volume +
- 18.Function button/Bluetooth Emit
- 19.CD door
- 20.Earphone port
- 21.USB disk port
- 22.Audio input port
- 23.CD door OPEN/CLOSE switch

Functions of Buttons on the Unit

No.	Name of button on front panel	Functions
1	DC 5V port	USB charging port
2	Carry strap hole	Put carry strap
3	ON-OFF	Power switch
4	Play/Pause	Instantly press this button to start playback or pause playback;
5	Programming button	Programming play
6	Repeat button	Single piece repeat, folder repeat (MP3 disc), full disc repeat Random
7	Stop button	Stop play
8	previous	press one time to skip to the previous track; long press to fast rewind
9	Volume -	Instantly press to reduce volume
10	Speaker	Built-in speaker
11	A-B	A-B repeat play
12	SPEED+	Press the button to get faster
13	SPEED-	Press the button to slow down
14	Display screen	Function display area
15	Middle cabinet	
16	Next	Instantly press to skip to the next track; long press for fast forward
17	Volume +	Instantly press to increase volume
18	Function button Bluetooth Emit	Convert among CD-USB-AUX for each instant press ,Long Press for bluetooth emit
19	CD holder door	Push the disc door switch, the door will automatically pop up and "OP" is shown on the display screen; put the disc correctly and close the door, the display screen begins to read the disc.
20	Earphone port	Earphone output port
21	USB port	USB port
22	Line input	External line input port
23	CD door switch	Switch button for CD door

Descriptions for Functions

Power supply

1. This unit has a built-in rechargeable polymer battery for power supply.
2. Lithium battery charge

When the battery is out of power, you need to connect the external MICRO USB 5V for charging.

When charging, the battery symbol on the LCD flashes; when fully charged, the battery symbol on the LCD is no longer flashing and full charge is displayed.

It takes about 4 hours to fully charge with 1000mA charging current.

 
 
 
Earphone connection method

You can use earphone to listen to the program played by this unit. Please plug the earphone into the earphone port (20) and then the speaker will be automatically disconnected.

Audio input connection method

This unit can amplify and the output all external audio sources (such as mobile phones, MP3 player, tape player, CD player and radio, etc.). For this, you shall insert the input line to the audio input port (22) and turn the function selection button (18) until to display "AUX" on the LCD screen, then it is transferred to AUX mode. Open the external audio source, signals will be input, amplified and output through this unit.

Bluetooth emit function

1. During the CD/USB/AUX playback, long press function button(18), then the Bluetooth symbol () flashes on the LCD display. And this unit in the Bluetooth emitting status.
2. Searching the Bluetooth device with Bluetooth receiving function. When find this device name of "SN004" and connect it. After successfully pairing, the bluetooth symbol () will light on the LCD display, then the music will be transmitted to play on this Bluetooth device.
3. If need to stop the Bluetooth emitting, long press function button(18) to exit. Then the Bluetooth symbol () will disappear from LCD display, and playback the music on this unit again.

CD/MP3 Disc Operation

1. Press the CD door switch at "ON" to open the CD door and place the CD/MP3 disc on the CD mechanism, then close the CD door. After a few seconds, the first track will be played automatically, and the LCD will display the current disc format, such as "CD", "MP3", etc.
2. Press the play/pause button (4) to temporarily stop play. Press this button again to resume play.
3. If you want to stop play during playing status, press the stop button (7) to stop play.
4. During playing status, press the previous button to skip to the previous track; press the next button to skip to the next track. If you press and hold the next /previous button, it will go fast forward or fast rewind.
5. Press RPEAT while in playback mode to cycle through the repeat modes. The following appears on the display:
⏮-Flashing -Repeat current track
⏮ -Repeat all tracks
⏮ [folder] -Repeat all tracks in current folder
RAND-Random playback
To cancel repeat mode, press Repeat until the ⏮ and RAND icon disappears on the display.
NOTE:
1.Repeat function is applicable to CD/USB mode only.
2.During the random play, the A-B repeat function will be disappeared.
6. A-B Repeat play: If you short press the A-B repeat button(11) during playback, this is the starting point A. If you short press the second time, this is the ending point B, and the CD will play from A to B repeatedly. Short press this button a third time to end the A-B repeat function and return to normal playback.

7. Programming play: when the play is stopped, press the programming button (5) to enter the programming status. Press the next or previous button to select the song to be programmed, and then press the programming button to save a song. It can program up to 20 songs. After programming, press the play button (4) to play the songs in the programmed order.
8. Speed adjustment: short press the SPEED+button (12) to get faster. (5 gears can be added). Short press the SPEED-button (13) to slow down (5 gears can be added).

USB Play

1. Insert the USB disk into the USB port (21) and press the function button (18) to enter the USB play mode, the songs in the USB disk will be played directly with "USB" displayed on the LCD.
2. If you want to end the play of USB disk, press the stop button (12). After the player is stopped, you can extract the USB disk.
Note: under the power-on status, press the function button (18) to select different functions in the following order :
3. Using the U disk function, A-B repeat playback is the same as CD operation, and variable speed playback operation is the same as CD operation.

Play CD/MP3 disc ► Play USB (when USB is plugged in) ► AUX

***** Do not directly extract the USB disk while playing, otherwise it may cause program error.

Maintenance

1. If the unit body is very dirty, you shall use a soft cloth that has been dipped in clear water and twisted to wipe the unit body. If you want to use chemical cleaners, please read the relevant instructions first. Never use alcohol or thinner to clean the case.
2. After using for a long time, the laser lens of this unit may become dirty, causing the sound to pause when playing. In this case, use a camera lens brush to gently wipe off the dust, and then blow it with a blower. You can also wipe the laser lens with a clean cotton swab that is dipped with a little water-free alcohol, and then wipe the lens again with another clean cotton swab.
3. Do not touch the data surface (silver surface) when holding the disc by hand to avoid the sound pause during play.
4. If the data surface of the disc is dirty, wipe with a soft damp cloth and then dry it. Note: wipe the disk straight from the center and don't rotate the disc when wiping.
5. Do not write or affix label on the disc

Guideline for Simple Troubleshooting

Trouble	Possible cause	Resolution
Failure to work	Dead battery	Fully charge the battery before using it
Not play	Disc placed improperly	Place the disc properly with printed side up
	Incompatible disc	Replace with compatible discs
	CD door not closed	Close CD door
No sound	Wrong operation	Operate according to the above instructions
	Volume at lowest level	Turn up the volume
Sound pause	Dirty disc or laser lens	Clean the disc or laser lens
	Disc scratched or curled	Replace the disc

Lukasa

SN004

BT/CD/MP3/USB プレーヤー

取扱説明書

プレーヤーを使用する前に、この取扱説明書をよく読んでください。